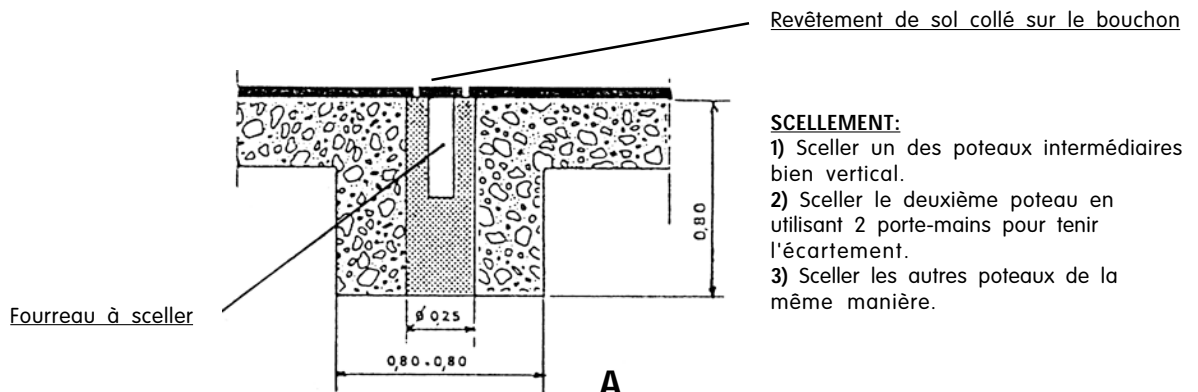
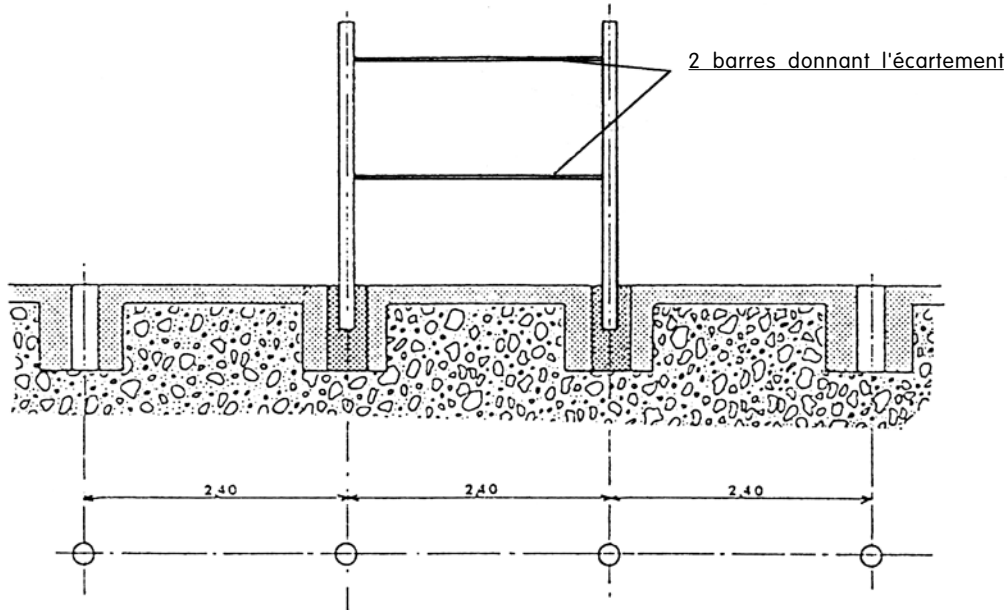
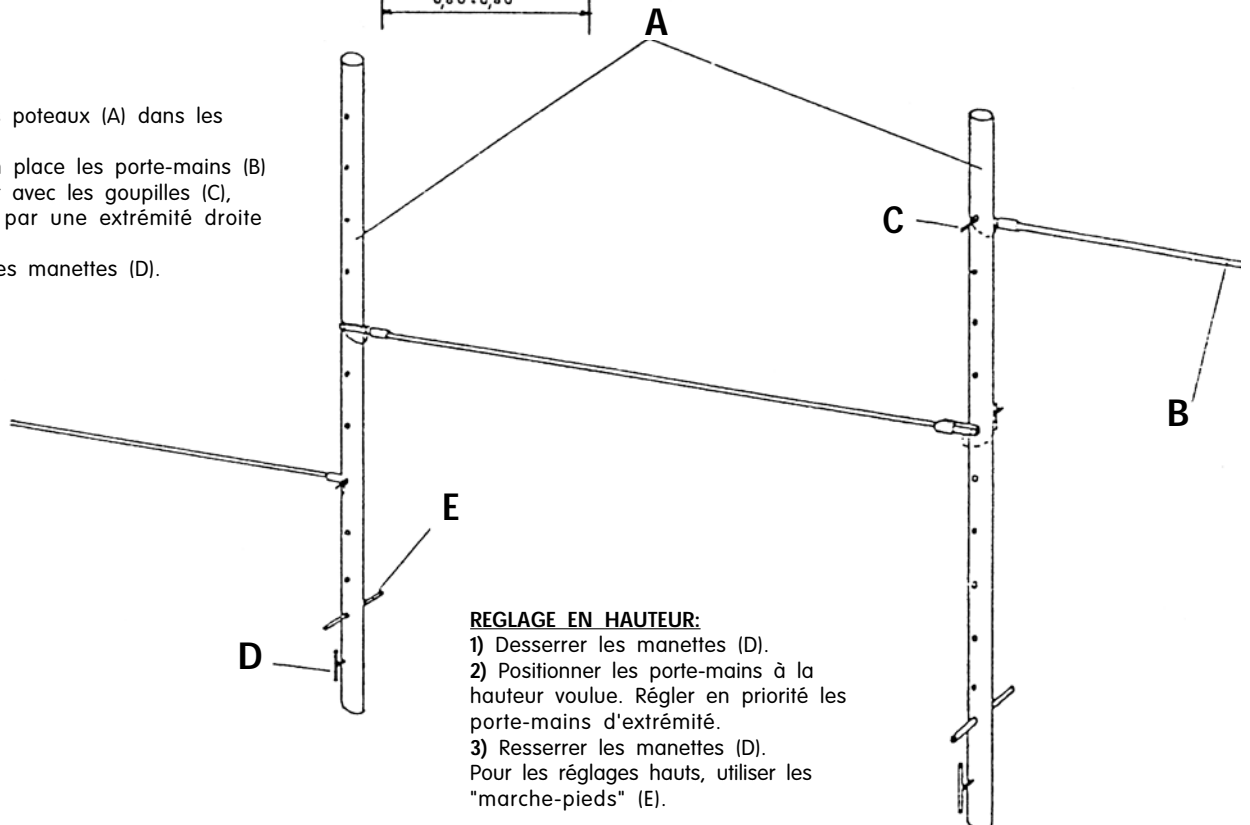


BARRE FIXE SANS HAUBANS**de 3101
à 3103****SCELLEMENT:**

- 1) Sceller un des poteaux intermédiaires bien vertical.
- 2) Sceller le deuxième poteau en utilisant 2 porte-mains pour tenir l'écartement.
- 3) Sceller les autres poteaux de la même manière.

MONTAGE:



- 1) Mettre les poteaux (A) dans les fourreaux.
- 2) Mettre en place les porte-mains (B) en les fixant avec les goupilles (C), commencer par une extrémité droite ou gauche.
- 3) Bloquer les manettes (D).

**REGLAGE EN HAUTEUR:**

- 1) Desserrer les manettes (D).
 - 2) Positionner les porte-mains à la hauteur voulue. Régler en priorité les porte-mains d'extrémité.
 - 3) Resserrer les manettes (D).
- Pour les réglages hauts, utiliser les "marche-pieds" (E).

**FREE STANDING
HORIZONTAL BAR**

from 3101
to 3103

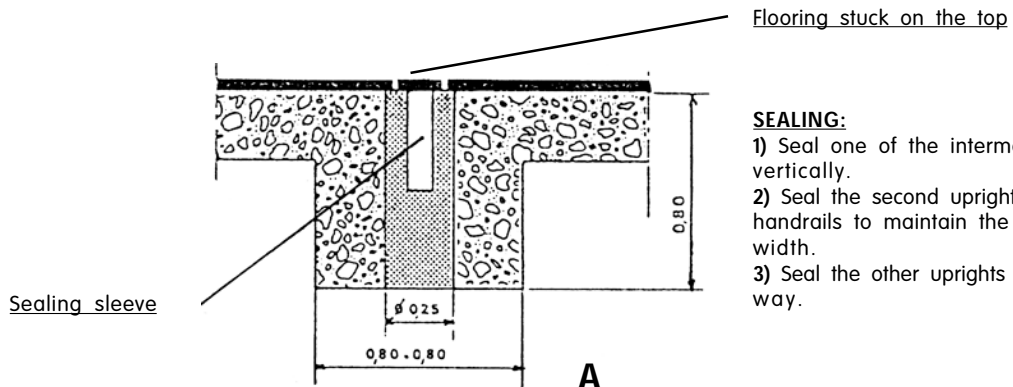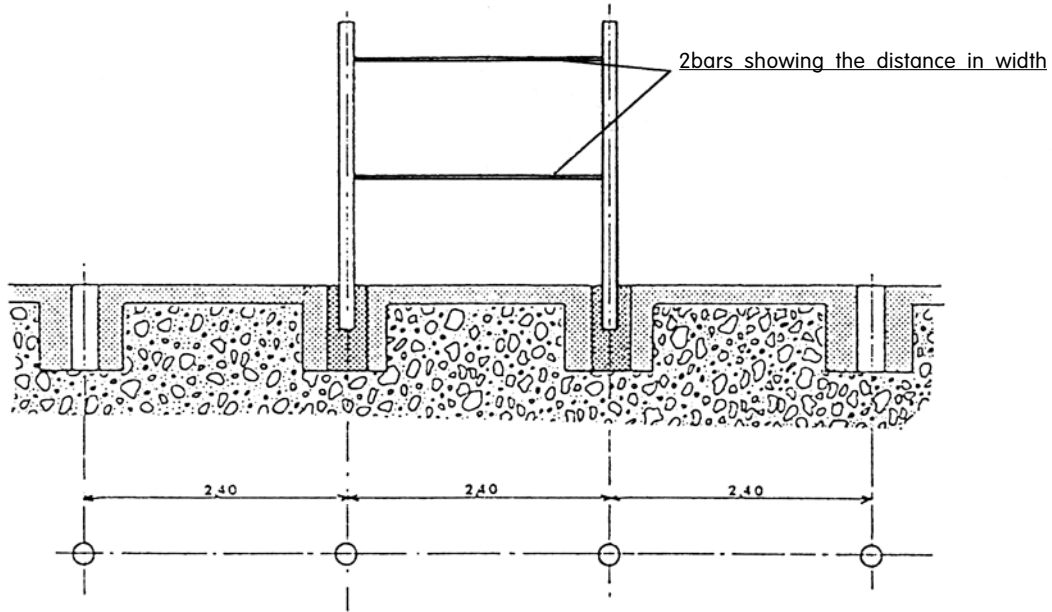


SEALING:

- 1) Seal one of the intermediate uprights vertically.
- 2) Seal the second upright using the 2 handrails to maintain the distance in width.
- 3) Seal the other uprights in the same way.

SETTING UP :

- 1) Slide the uprights (A) in the sleeves.
- 2) Fix the handrail (B) with the pins (C), begin with one extremity, right or left.
- 3) Block the levers (D).

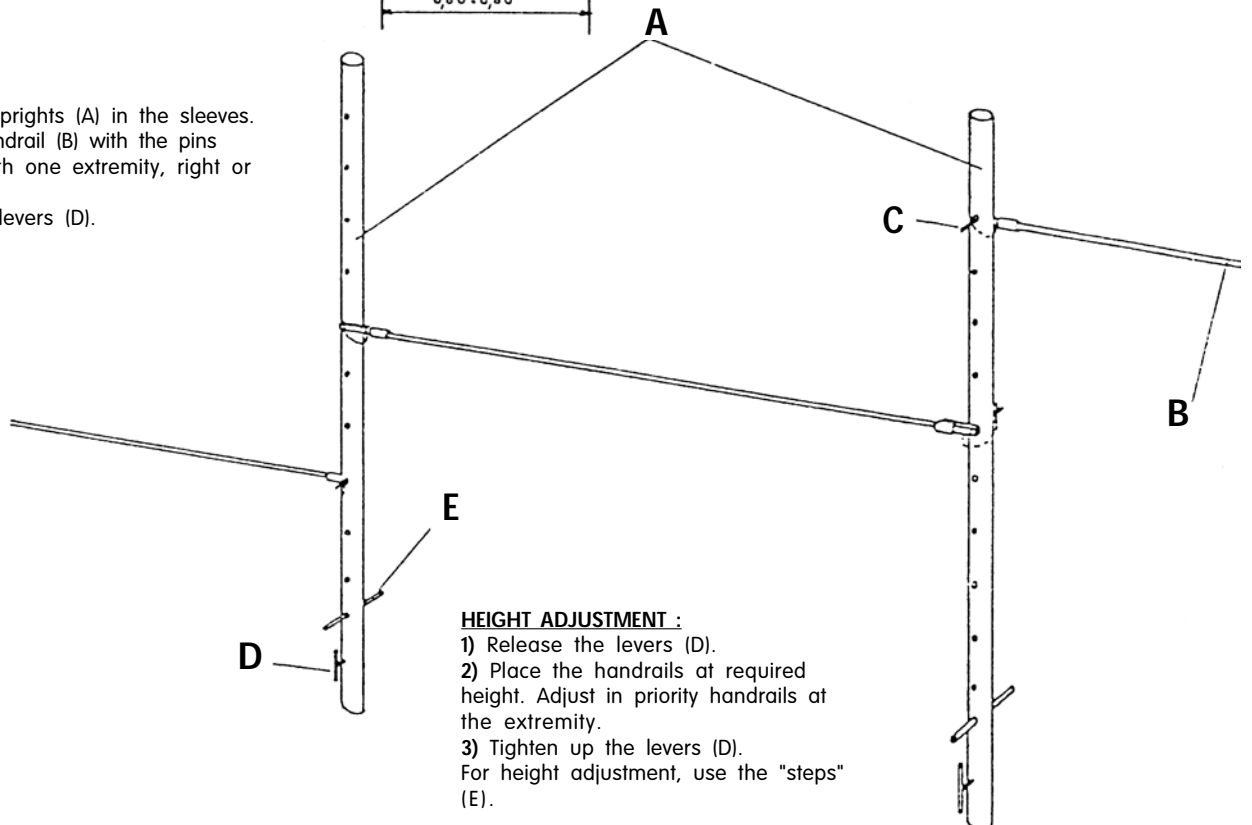

HEIGHT ADJUSTMENT :

- 1) Release the levers (D).
 - 2) Place the handrails at required height. Adjust in priority handrails at the extremity.
 - 3) Tighten up the levers (D).
- For height adjustment, use the "steps" (E).